

Operation Manual



Disinfectant nano atomizer

Please read the product description before operation.

1 .Scope of application

Home	KTV
Car	Performing arts hall
Bar	Gymnasium
Hotel	Wedding ceremony
Troops	Factory
The cinema	Office building
School	Outdoor performances, etc

Matters needing attention

- 1.Only authorized technicians can disassemble this product. Users are not recommended to disassemble this product.
2. Do not operate this product at will until you are familiar with the operating instructions.
3. This product requires professional personnel to carry out daily operation and maintenance.
Do not contact wires, sockets and host circuit parts when hands are wet.
4. Please do not place it in the place where children touch it. Minors are forbidden to operate this product.
5. If you do not use this product for a long time, please shut down the machine and cut off the main power supply.


2. Inspection

This product shall be packed strictly before leaving the factory.

Considering various factors during transportation, please check before use:

1. Whether the casing of the main engine is deformed and whether the components are bad.
2. Whether the external parts \connectors of the main engine are loose.
3. Whether the accessories in the host package are complete.

3. Product structure

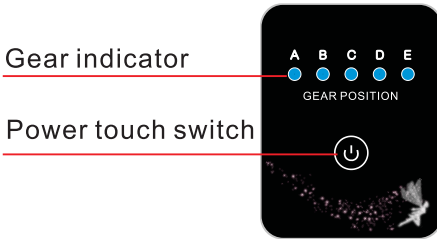



(Short press is to start the machine and adjust the gear. Press for more than 3 seconds to shut down. After startup, the atomizer will automatically shut down if its standby time exceeds 90 seconds. If the handle switch is not released after continuous spraying for more than 10 minutes, because the machine is equipped with automatic high-temperature protection device, the atomizer will automatically shut down.)


! Note: Mineral water or distilled water should be used when diluting disinfectant, tap water is strictly prohibited for dilution (chlorine, fluorine and other substances remain in tap water). Please be careful not to add perfume, essential oil or other oily essential oil casually. Blockage caused by adding other oily perfume or essential oil is not covered by the warranty.



! Note: The atomizer should not spray directly on the human body to avoid scalding. In order to achieve the best atomization effect, the nano nozzle should be tilted slightly downward when the atomizer is working.

4. Operation introduction

Turn on the power supply, press , the machine will preheat automatically (for 5 minutes), and atomize after preheating. The blue light next to the nozzle lights up. At this time, atomization disinfection is carried out through the button on the handle. The atomization size can be adjusted through the gear  on the panel.

Press  to turn off the power supply after atomization disinfection is completed. (The machine will automatically turn off the power supply after 90 seconds of standby time)

5. Gear introduction

First gear-the A lamp lights up and the BCDE lamp goes out. When the temperature has not reached the set value, the A lamp flashes, the handle switch is pressed and there is no response. When the temperature reaches the set value, the A lamp is always on and the blue lamp on the gun head turns on. Press and hold the handle switch buzzer to start spraying later. Second gear -- AB lamp lights up and CDE lamp goes out. When the temperature has not reached the set value, A lamp flashes and the handle switch is pressed down to react. When the temperature reaches the set value, A lamp is always on and the blue lamp on the gun head turns on. Press and hold the handle switch buzzer to "drip" and start spraying later.

Third gear -- ABC light is on and DE light is off. when the temperature has not reached the set value, a light flashes, the handle switch is pressed and no response is made. when the temperature reaches the set value, a light is always on and the blue light on the gun head turns on. hold down the handle switch and the buzzer "drops" to start spraying later.

Fourth gear -- ABCD lights on and E lights off. When the temperature has not reached the set value, A light flashes, the handle switch is pressed and there is no response. When the temperature reaches the set value, A light is always on, and the blue light on the gun head turns on. Press and hold the handle switch buzzer to "drip" and start spraying later.

Fifth gear -- ABCDE gear is on. When the temperature has not reached the set value, the A lamp flashes, the handle switch is pressed and there is no response. When the temperature reaches the set value, the A lamp is always on, and the blue lamp on the gun head turns on. Press and hold the handle switch and the buzzer "drops" to start spraying later.

Special note

1. All contents in this manual have been carefully checked. If there are any typographical errors or misunderstandings in the contents, please correct and keep in touch. The company reserves the right to interpret.
2. If the product is updated, no further notice will be given. I hope the atomizer can bring you a more simple, comfortable, efficient and fashionable health care experience.

Precautions for safe use

To ensure that you use this product correctly, please read carefully all safety precautions before using it. The safety precautions can help you use this product correctly to avoid personal injury or property damage to you or others. The contents of safety precautions are as follows, please follow the relevant regulations of safety precautions!

Ban

1. The following persons should not use this product:

Children

Allergy

Mental Disorders

Pregnant

Menstrual or Lactating Women

People with skin injuries, eczema, swelling, skin diseases, atopic dermatitis or skin sensitivity and other physical abnormalities .
Such as fever, heart diseases, serious diseases, acute diseases, malignant tumors, tuberculous diseases, blood diseases and other symptoms of people with arrhythmia or other devices installed on their bodies.

2. Do not use thinner, benzene or other dissolving agent to clean or wipe the product.
3. Please do not drop or collide with this product to avoid damaging this product. If this product is damaged due to collision or drop, please do not use it again.
4. Do not rebuild, disassemble or repair this product. For repair matters, please contact the store or designated repair point where you purchased this product.
5. Do not place the product close to fire source, heated or used or placed in high temperature environment.

Specifications

Product Name: Disinfectant Nano Atomizer

Product Model: LRC- 000125

Operating Voltage: 220 V

Rated Power: 1300 W

Gross weight: 1.70 KG

Net weight: 1.52 KG

Product size: 285 × 245 × 67 mm (power cord length: 230 mm)

Packing size: 290 × 280 × 80 mm

Packing list: 1 main machine, 1 instruction manual.

Note: In view of the consistent policy of continuously improving products, the company reserves the right to change the specifications of products, and the actual goods shall be subject to delivery.

Maintenance and repair

1. When this product is not used for a long time, it should be checked regularly.
2. After using the atomizer, please wipe off the residual disinfectant with clean paper towel or dry rag.
3. Do not place the product in a humid or high temperature environment. Please place it properly in a normal temperature, dry and ventilated place.
4. When the product is not used for a long time, clean the product and store it in a sealed and dry environment.
5. When dumping products, please do not pile them up with ordinary household garbage, but send them to the recycling station designated by the government to help protect the environment.